

?? General safety instructions for batteries

Please keep this guide safe so you can refer to it. Pass it on to subsequent owners.

This device is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities or who lack experience and/or knowledge, unless they are supervised or given instructions by a person responsible for their safety, how to use the device.

The device is not a toy for children. Therefore, keep children away from it. Children must be supervised so that they do not play with the battery.

Converting or changing the device impairs product safety. Changes and repairs to the device may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer. Never open the device yourself. Don't do any repairs yourself!

Handle the device carefully. It can be damaged by shocks, blows or falls from even a small height.

Keep the device away from moisture and extreme heat.

Stay nearby while charging the battery and check its temperature regularly. If the heat is high, stop charging immediately. A battery that heats up or deforms during charging must not be used.

Never immerse the device in water or other liquids. Do not touch the device with wet or damp hands.

Check the device for damage before using it for the first time. Do not use it if there is visible damage.

Never use the device after a malfunction, e.g. if it has been dropped into water, dropped or otherwise damaged.

Disconnect the battery from connected devices if you will not be using it for a long period of time.

Revision #1

Created 2025-12-15 15:30:26 UTC by BM

Updated 2025-12-15 15:31:37 UTC by BM