

Parts / Teile / Pièces / Partes / Parti / Onderdelen

image.png

1	Button	Taste	Bouton	Botón	Pulsante	Knop
2	LED Display	LED-Anzeige	Écran LED	Pantalla LED	Schermo LED	LED-display
3	DC input & output	DC-Eingang und -Ausgang	Entrée et sortie CC	Entrada y salida de CC	Ingresso e uscita CC	DC-ingang en -uitgang
4	USB-C1 input and output	USB-C1-Ein- und -Ausgang	Entrée et sortie USB-C1	Entrada y salida USB-C1	Ingresso e uscita USB-C1	USB-C1-ingang en -uitgang
5	USB-C2 output	USB-C2-Ausgang	Sortie USB-C2	Salida USB-C2	Uscita USB-C2	USB-C2-uitgang
6	USB-A output	USB-A-Ausgang	Sortie USB-A	Salida USB-A	Uscita USB-A	USB-A-uitgang
7	12V Cigar lighter socket output	12V Zigarettenanz ünderbuchse	Sortie prise allume-cigare 12 V	Salida de toma de encendedor de cigarrillos de 12 V	Uscita presa accendisigari 12V	12V sigarettenaan steker aansluiting uitgang
8	LED light	LED-Licht	Lumière LED	Luz LED	luce LED	LED-lamp

Revision #2
Created 2025-12-23 09:23:16 UTC by Product Management
Updated 2026-01-20 13:19:38 UTC by BM